

みよし市勤労文化会館 小ホール 音響コンセント盤リスト

Ver 2022 0901

音響室																			
下手マルチ1																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
下手マルチ2																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
ステージコンセント												映写室							
1	2	3	4	5	6	7	8	9	10	11	12			1	1				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C			12C	12C				
ワイヤレス								客席コンセント				吊りマイク		EVマイク					
1	2	3	4					2				L	R						
12C	12C	12C	12C					12C	12C			12C	12C		12C				
上手 下手バラ																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
客席 下手バラ																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
周辺機器 PB																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
周辺機器 REC																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C				
音響調整卓CH IN																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C				
音響調整卓CH IN																			
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32				
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C				
音響調整卓ST IN												バラ							
L-1-R	L-2-R	L-3-R	L-4-R																
11C	11C	11C	11C	11C	11C	11C	11C	11C					11C	12C	12C				
インカム Ach								インカム Bch				バラ							
1	2	3	4	5	6	7	8							11C	12C				
11C	11C	11C	11C	11C	11C	11C	11C							12C	12C				
DME1 SLOT2 OUT								600-600				600-600				バラ			
1	2	3	4	5	6	7	8	25	26	27	28	29	30	31	32				
12C	12C	12C	12C	12C	12C	12C	12C	11C	12C	11C	12C	11C	12C	12C	12C				
ピンスポット		Monitor						10K-600				10K-600				バラ			
11C	11C							11C	12C	11C	12C	11C	12C	12C	12C				
音響調整卓OMNI OUT																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14						
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C						
エアモニHA																			
IN-3-OUT		IN-4-OUT		IN-5-OUT		IN-6-OUT		IN-7-OUT		IN-8-OUT		L-IN-R		OUT R					
11C	12C	11C	12C	11C	12C	11C	12C	11C	12C	11C	12C	11C	12C	11C	12C				
エアモニマイク		エアモニHA		開演プザー装置		舞台袖簡易操作卓				音響調整卓MONI OUT									
1	2	1	2	OUT L	1	2	3	4	5	L	R								
12C	12C	12C	12C	11C	12C	12C	12C	12C	12C	12C	12C								
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C						
エアモニHA IN		DME1 SLOT2 IN								音響室モニタースピーカー									
インカム																			
6PIN メス																			

下手パッチ盤															
ステージマイクコンセント												客席		EV MIC	Monitor
1	2	3	4	5	6	7	8	9	10	11	12	1	2	EV MIC	Monitor
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C
上手～下手 パラ(音響室)															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C
客席～下手パラ(音響室)															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C
PA OUT															
L - 固定FB - R	6A	6B	7A	7B	8A	8B									
NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス								
FB															
L - 固定FB - R	1	2	3	4	5	6	7	8							
NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス	NL4メス						
下手マルチ(音響室)				下手マルチ2(音響室)				上手～下手マルチ				客席～下手マルチ			
FK メス				FK メス				FK オス				FK オス			
								FB1				下手インカム			
								NL4メス				6PINメス			

上手パッチ盤															
下手～上手パラ															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C
上手～下手マルチパラ				客席～上手マルチ								FB4			
FK メス				FK メス								NL4メス			
												上手 壁インカム			
												3PINメス			

客席コンセント盤															
客席～下手パラ(音響室)				客席～下手マルチ				客席～上手マルチ							
FK メス				FK メス				FK オス							
AV100V(15A)												インカム A/B			
平行2口												6PINオス			

客席コンセント															
下手コンセント		上手コンセント													
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C	11C
12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C	12C

インカム															
調光室				映写室				CL				下手 FR			
6PINメス				6PINメス				6PINメス				6PINメス			
上手 FR															
6PINメス															